 


Operating instructions (60165-661)

Washers **TALPET HD 60, 65, 75, 100, 135 ja 165** (Cygnus Commercial Control)

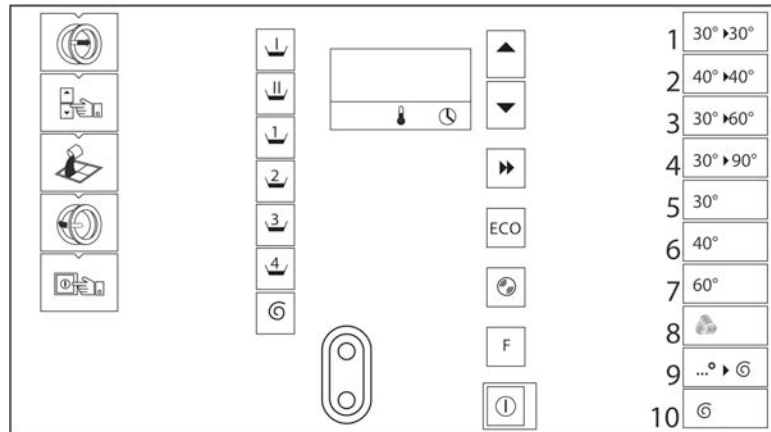

General

The machine operating panel includes a display that indicates the temperature, the remaining wash time and the current program number. The machine operating buttons are placed on the right hand side of the display, and the indicator lights for the program stages and progress on the left.

INDICATOR LIGHTS

Pre-wash

Wash

Rinses

Spin



OPERATING BUTTONS

Program selector

Program bypass

Eco mode

Spin speed adjustment

Special functions

START/STOP



The left side of the control panel has a red EMERGENCY STOP button that is marked with a yellow circle. This will shut the machine down. The EMERGENCY STOP button is to be used only in case of danger, and it is not needed in regular use. After the EMERGENCY STOP button has been pressed, the machine can be started only after the button is released by turning the red knob clockwise, as indicated by the red arrows.

The machine door can be opened by pulling lightly on the handle, and closed by carefully closing the handle.

Do not clean the washing machine under running water.

Before using the machine

Make sure that the water inlet valves are open. Close the valves when the machine is not in use.

Check that the power is switched on from the safety switch on the wall. The switch must always be turned on, that is, in the ON or I position. If the power is switched on from the safety switch but the machine display is off, make sure that the EMERGENCY STOP button has not been pressed and left unreleased (see “General”).

Sort the laundry according to the care labels and make sure that all pockets are empty. Foreign objects in the washer drum may damage the machine. The following table shows in kilograms the capacities (weight of dry laundry) of these washer models. For delicate items it is recommended to use max half of the machine capacity.

Model	Capacity	Model	Capacity	Model	Capacity
HD 60	5,5 kg	HD 75	7,5 kg	HD 135	13,5 kg
HD 65	6,5 kg	HD 100	10 kg	HD 165	16,5 kg

DO NOT WASH CARPETS OR SIMILAR ITEMS IN THIS MACHINE!

Place the laundry in the machine lightly and close the washer door carefully.

If the dryer is connected to a vending machine, read also its instructions. When a wash program vending machine is in use, the display shows “Not Active” until a payment has been made.

Selecting the program

Choose from programs 1-10. The display indicates the selected program.

	Program number	Program contents:		
		pre-wash	wash	spin
1 	1	30 C	30 C	500
2 	2	40 C	40 C	1000
3 	3	30 C	60 C	1000
4 	4	30 C	90 C	1000
5 	5	-	30 C	500
6 	6	-	40 C	1000
7 	7	-	60 C	1000
8 	8	-	villa	500
9 	9	rinse and spin		1000
10 	10	spin		1000


Choose a program by pressing the  button.

The wash program contents are indicated also by symbols on the washer front panel.

Dosing detergent, fabric softener and bleach

Dose the detergent, fabric softener and bleach into the detergent compartments as indicated in the images below. Always follow the detergent manufacturers' dosing instructions.


Dosing the detergent

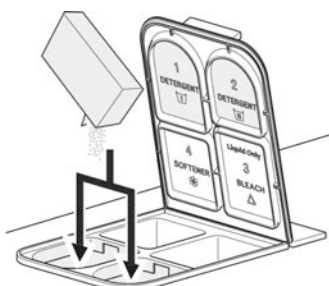

PRE-WASH (I)

WASH (II)


Dosing liquid detergent

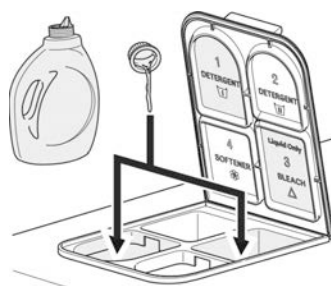



PRE-WASH (I)

WASH (II)

Dosing fabric softener

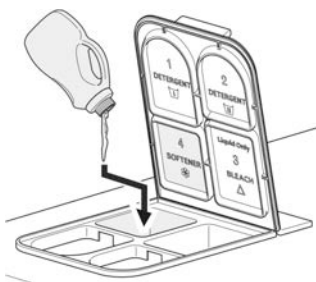

Dosing bleach

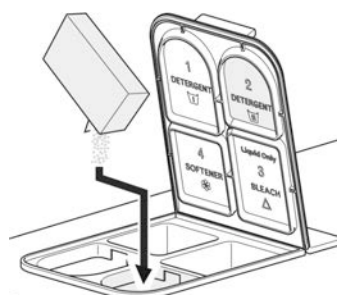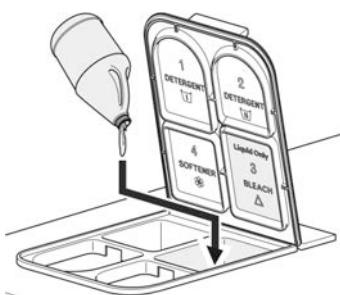

Special functions to be selected before starting the machine

Light load

When only small amounts of laundry is washed, the fill level can be set to light load by pressing the **ECO** button. Indicator light next to the button is lighted when the function is in use.

Adjusting the spin speed

The program spin speed can be adjusted as follows:

Press the spin speed  button to display the current spin speed.

Spin speed can now be adjusted by the  buttons.

Press  to verify the selection.

Special functions

The additional functions that can be selected by pressing the  button, are available only in special models.

Starting the machine

The washer is started by pressing the  button.

Program can be cancelled by pressing the  button. After cancelling the program, the washer door can be opened when the drum has stopped and drained water, and the display indicates "End."

If the machine is connected to a vending machine and the program is cancelled by pressing  5 minutes after the program was started, restarting the machine usually requires a new purchase from the vending machine. However, this depends on the type and connection of the vending machine used.

Skipping program stages

If required, wash program cycles can be skipped by pressing the  button. This function can be tracked from the indicator lights for the various stages of the program.

After using the machine

When the program has finished, the display indicates "End" and the door can be opened. Leave the washer door open and clean the machine for the next user.

Safety instructions and warnings

- Do not clean the machine under running water.
- Do not let children play with the machine.
- Do not use the washer if some of its parts are broken or have been removed.
- Use only machine washing detergent.
- Do not use the machine for chemical washing.
- Textiles removed from the machine after aborting the program may be hot.

In case of problems

Notify the house janitorial service of the error message on the display.